

Combi-Cam MOUNTING CUTOUT

Installation Instructions:

- Fits standard 19mm - 3/4" cam hole
- Short cam can be placed in increments of 90 degree positions
- Long cam can be positioned in increments of 45 degrees

1. Insert lock body through front of 19mm - 3/4" drilled hole.
2. Wood Only- place prong washer over lock body, prongs facing wood.
3. Thread cylinder nut & tighten.
4. Attached stop cam and straight cam and secure with screw and lock washer.

Note: Stop cam placement




Cam will rotate right



Cam will rotate left

TM

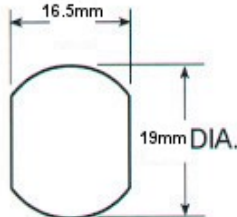

Screw & Lock Washer



32mm - 1 1/4" Straight Cam



90° Stop Cam



19mm - 3/4" Cylinder Nut



12.5mm - 1/2" Straight Cam



19mm - 3/4" Prong Washer

Instructions for setting your personal combination:

- The combination is factory set at >>0-0-0<<
- Combination must be on opening number prior to resetting
- On the underside outer edge of the lock there is hole for the code reset button. Rotate the face of cam until the code reset button comes into view.
- Push this pin in with a paper clip and keep it pushed in.
- Set your personal combination by turning the dials to the desired combination.
- Release the reset button and your combination is set.
To lock, rotate lock to "locked" position. Rotate one or more dials after lock is closed. To open the lock, turn dials to your personal combination.

NOTE: If you desire, the Combi-Cam can be installed such that it is nonresettable by the end-user.

Directions:

- Take off the screw to the cam and remove the cam & the "stop cam"
- Rotate the cylinder 180 degrees and then put the "stop cam" and the cam back on.